



GINGERBREAD HOUSE BOX

assembly instructions

1. Open the SVG file in your cutting machine software. Cricut users should use the Cricut file, Silhouette users should use the Silhouette file. All other machine users, test to see which of the two SVG files works best with your particular machine for the score lines.

NOTE FOR CRICUT USERS: The fold lines have been set as score lines in the file, however sometimes the Design Space software does not recognize this. If you do not see the fold lines set to “score” on your layers list at the right, you can change these manually. Select each object that should be a score line from the list at the right, then at the top left, change it from “Basic Cut” to “Score.” You can use the PNG for reference and set anything that appears as a dashed line in the PNG image as a score line in Design Space. Score lines may also need to be attached to their corresponding piece by selecting both objects and clicking “Attach” at the bottom right. Note that Cricut users need a scoring tool for their machine to be able to use the score lines.

2. If you move the design on your workspace, make sure the score lines stay together with their corresponding piece.
3. Cut all of your pieces out of cardstock. If you do not want anything behind the holes for the windows, you can skip cutting the two house-shaped inserts if you wish.
4. Pre-fold the box along the score lines.
5. If you will be using the house-shaped inserts, glue those behind the sides of the box that have holes for the windows. Make sure to glue the inserts to the inside of the box.
6. Glue the door to the front of the box. The front is the side with a single window.
7. Place glue along the side flap of the box, then fold it around and affix to the other side to form the main house box shape.
8. Fold the roof along the score lines.
9. Apply glue to the tabs at the top of the house box and use these to affix the roof. Apply pressure from the inside of the box to get the tabs to stick to the roof. If your fingers won't fit, you can use a skewer, pencil, or something similar. The roof will overhang slightly at the front and back.
10. Fill your box, then close the bottom by folding up the flaps and closing the lid.